

## **Genco Mine Service**

**P.O. Box 581  
630 North 400 East  
Huntington, Utah  
84528**

**Phone (435) 687-2464  
Fax (435) 687-9256  
1 (800) 662-1257  
Genco@etv.net**



# **PARTS LIST**

**Bucyrus, Fletcher,  
Joy, & Wagner.**

**Components  
for  
Bucyrus & Joy**

**January 2011**

*We appreciate your business, Thank You!*

# PARTS LIST

## Bucyrus Parts

Part Number	Description
010176	Nut
010177X1	Spacer
010179	Flange
012300-1	Shaft
012300-11	Pin
012300-3	Cable Guide
012300-4	Bracket
012300-5	Bushing
012300-7	Spring
012300-8	Guide
012300-9	Pin
012336	Pin
012588X1	Bumper
013627X1-1	U-Joint
016848X1	Bearing
016863X1	Pin
016863X2	Pin
016914	Spacer
016918	Center Section Assembly
0201819	Strainer
0902812	Accelerator
1090180	Switch
1090182	Switch
1090387	Switch
1110149	Contact
1190380	Plug
14149-009	Shaft
14150-080	Coupling
14928-000	Cap
17076X3	Filter
2050000	Master Cylinder
210147	Switch
211044	Valve
2457	Nut

# PARTS LIST

## Bucyrus Parts

Part Number	Description
286035	Retainer
290098	Pin
292505	Pin
293D1A1	Shaft
293D1B2	Splined
293D1B3	Flinger
293D1B4	Gear
293D1B5	Shaft
295217	Valve
3/8 X 4	Cotter Pin
3/8 X 5	Cotter Pin
3006-7839	Contr 76/114V
3030253	Gear
3030268	Gear
3030314	Pinion
3030318	Pinion
305E151	Filter
3060589	Shaft
3066458	Drive Shaft Assembly
3097483	Nut
3120230	Bushing
3120231	Split Brass
3126 CL	Conn Link
3150139	Spring
3150155	Spring
3210038	Brake Disc
3210050	Washer
3210083	Brake
3230114	Shim
3230139	Shim
3230140	Shim
3410108	Cover
34427	Tip
3908-0106	Monitor
3908-1237	Filter
4-010010-530	Hub
4-010018-003	Motor

# PARTS LIST

## Bucyrus Parts

<b>Part Number</b>	<b>Description</b>
4-010468-300	Socket
42893X93	Key Steel
4300-2518	Bevel Gear
4320-7273	Pinion
4320-7299	Pinion
4321-3891	Gear
4321-4733	Gear
451835	Shaft
5802-5990	Caliper
5803-6492	Brake Disc
5805-0899	Torque Arm
5806-3595	Adjuster
5809-6413	Spring
5812-4538	Brake Shoe
5817-0879	Sand Box
6002-2431	Roller Assembly
6-010-106	Axle Assembly
6-010-193	Clevis
6-010-378-0	Contactora
6-010-416-1	Cable
6023-4252	Side Board
6023-5239	Screen
6026-2346	Side Board
71280	Hub
71282	Cover
8080-0220	Cover
8080-1459	Sniffer
8210-0058	Shaft
8212-3720	Torque Shaft
8212-3852	Torque Shaft
8420-0971	Shim
8565-043	Spring
9094-3259	Sleeve
9094-3275	Shaft
9-130001-125	Nut
955-250001	Exhaust Elbow
9-621001-500	Insert

# PARTS LIST

## Bucyrus Parts

Part Number	Description
9-621001-600	Coupling
9-644003-000	Switch
9-644006-000	Disconnect
9-644009-000	Switch
976 Stud	Stud
9-804008-020	Bolt
A1000-11	Shim Set
A1000-12	Shim Set
A1000-13	Dipstick
A1000-6	Gear
A1000X2-2	Washer
A1000X2-3	Wear Plate
A10550-10	Shaft
A10550-15	Key Steel
A10550-16	Key
A10550-21	Shaft
A10550-22	Spacer
A10550-23	Washer
A10550-24	Nut
A10550-7	Shim Set
A10550-8	Breather
A10550X4-5	Gear Set
A10550X4-5P	Pinion
A10550X4-6	Gear Set
A11332	Yoke
A118X1X1	Coupling
A118X1X2	Coupling
A12000-1R	Bus Bar
A12000-2R	Logic Box
A12093X1K	Hardware Kit
A12116X1	Push Pull Cable
A12116X5	Push Pull Cable
A1373X1	Spring
A14284	Plug
A1656	Brake Disc
A1666X1	Flange
A1668	Flange

# PARTS LIST

## Bucyrus Parts

Part Number	Description
A2060-3	Bushing
A2340	Washer
A2359X1	Trip Gong
A2465X1	Flange
A2480X1-11	Panic Switch
A2480X2-3	Base
A2480X2-5	Interlock Kit RH
A2480X2-6	Interlock kit LH
A2480X4	Contactor
A2480X4R	Contactor
A2480X7	Contactor
A2480X7-2	Stop Bar
A2481X2-1	Contact Tip
A2481X2-12	Base
A2481X2-2	Tip Kit
A2481X2-3	Tip Kit
A2481X2-4	Tip Kit
A2481X2-5	Tip Kit
A2481X3	Contactor
A2481X3R	Contactor
A2634X3	Pin
A2785-13	Shunt Trip
A2793X1	Pin
A2973X10	Bushing
A2973X11	Bushing
A2973X6	Bushing
A2973X9	Pin Assembly
A3020	Coil
A3156X32	Cable
A3156X42	Cable
A3157X11	Cable
A3157X14	Cable
A3157X15	Cable
A3157X16	Cable
A3300-2S	SCR
A3300-4B	Suppressor
A3300-5X	Coil

# PARTS LIST

## Bucyrus Parts

Part Number	Description
A3300-7X	Socket
A3331-1	Valve
A3331-2	Nozzle
A3331-2-1	Cap
A3331-4B	Red Button
A3406-5	Switch Shaft
A3428	Switch
A3460X1	Switch
A3467	Coil
A3560	Fuse
A3588X1	Seat
A3588X1S	Seat
A3600 R	Panel
A3600-16	Cap Bank Assembly
A3600-16R	Capacitor
A3600-1B	Inner Buss
A3600-7X	Term Strip
A3600-8A	Suppress Card
A3782	Yoke
A3829-100	Fuse
A3829-140	Fuse
A3883	Silicone
A4020-3	Pump Adapter
A4020-7	Shim Set
A4020-8	Shim Set
A4020X1R	Reducer
A4020X2	Reducer
A40540-125	Coil
A4162-8	Ball Bushing
A4183-1	Lens
A4183X1	Head Light
A4208	Bearing
A4332	Yoke
A4352	Nut
A4353	Stud
A4353X1	Stud
A4354	Washer

# PARTS LIST

## Bucyrus Parts

Part Number	Description
A4377	Packing
A4387	Brake
A4387-10	Bracket
A4387-12	Spring
A4387-4	Piston
A4387-7	O Ring Kit
A4387-8	Lining Kit
A4387B	Brake
A4391	Check Valve
A4431	Master Switch
A4464	Shaft
A5100 R	SCR Panel
A5100-13	SCR
A5100-14	Inductor Delay
A5100-2	Capacitor
A5100-25	Term Strip
A5100-29	SCR
A5100-2R	Cap Bank
A5100-32	SCR
A5100-37	Fuse Holder
A527-3	Bushing
A528-4	Bushing
A5835X2	Drive Shaft
A5835X3	Drive Shaft
A5835X5	Drive Shaft
A5836	Flange
A600X4	Arm
A600X6	Arm
A600X8	Switch Level
A620-15	Key
A620-16	Key
A620-21	Shaft
A620-22	Sleeve
A620-23	Washer
A620-24	Nut
A620X8-5	Gear Set
A620X8-5P	Pinion

# PARTS LIST

## Bucyrus Parts

Part Number	Description
A620X8-6A	Gear Set
A6230X1	Retaining Ring
A641	Switch
A642	Handle
A642X5	Handle
A643	Nut
A644	Tube
A645	Nut
A646	Tube
A6567	Pin
A8001-066	Bolt
A8006-202	Nut
A8006-309	Nut
A8023-123	Washer
A9000-001	Master Cylinder
A9011-103	Yoke
A9011-109	Washer
A9011-110	Nut
A9011-111	Spacer
B10246	Shim Kit
B12079X1	Handle
B12521	Brass
B12521X1	Brass
B2200-2	Yoke
B2200X11	Drive Shaft
B2200X15	Drive Shaft
B2200X19	Drive Shaft
B2200X9	Drive Shaft
B3406-5	Shaft
B3749-B	Pedal
B3825-1	Bushing
B3825-2	Bushing
B4018	Nut
B4213	Spacer
B4224	Spacer
B4306	Bushing
B4332	Yoke

# PARTS LIST

## Bucyrus Parts

Part Number	Description
B4338	Plate
B4474	Mounting Pad
B4934X1	Nut
B5451L	Bracket
B5451R	Bracket
B5454L	Lug
B5454R	Lug
B5460	Support
B6221	Pin
B6228X1	Linkage
B6245	Bumper
B900-1	U-Joint
B900-2	Slide Joint
B900X10	Drive Shaft
B900X31	Drive Shaft
C1038X1-5	Bleeder
C1038X2	Disc Brake
C1038X2-4	Brake Pad
C1038X7	Cast Iron Brake
C1038X8	Brake
C3195	Plug
C3196	Receptacle
C544X1	Gland Nut
C544X2	Gland Nut
D10216	Center Section
D10217	Nut
D10275	Lock Collar
D13740-24	Ring Gear & Pinion
D13740-25	Shim Kit
D13740-40	Spider Kit
D2500-4	Spacer Ring
D4067X1	Pin
D4200-11	Nut
D4200-12	Retainer Lock
D4200-13	Hub
D4200-14	Ring Gear
D4200-15	Lock

# PARTS LIST

## Bucyrus Parts

Part Number	Description
D4200-16	Spider
D4200-16WG	Spider Assembly
D4200-17	Pinion Shaft
D4200-19	Pinion Gear
D4200-20	Washer
D4200-24	Sun Gear
D4200-25	Snap Ring
D4200-4	Axle
D4200-45	Retainer
D4200-5	Spindle
D4200-62	Snap Ring
D4200-7	Seal
D4200-7A	Seal
D4200X2-42A	Gear Set
D4200X2-57	Screw
D4200X2-58	Nut
D4200X2-63F	Yoke
D4285X1	Collar
D4300-18	Washer
D4300-19	Yoke
D4300-1BX	Housing End
D4300-27	Ring Gear & Pinion
D4300-8	Dowel
D4340	Pivot Plate
D4400-15	Nut
D4400-16	Yoke
D4400-31	Lock
D4400-37	Bolt
D5300-17	Cover & Seal
D5300-24	Ring Gear & Pinion
D5303	Swivel Pin
D5310	Hub
D5400-12	Lock
D5400-13	Gasket
D5400-2	Axle
D5400-3	Nut
D5400-4	Spindle Lock

# PARTS LIST

## Bucyrus Parts

Part Number	Description
D5400-5	Nut
D5400-8	Dowel
D5627	Bracket
D5923	Wiring Harness
D6041X1	Center Section
H509	Oil Fill & Cap
H511	Filter
H587	Coupler
H598	Pump
H788	Solenoid
H797	Strainer
H807	Cylinder
H808	Cylinder

# PARTS LIST

## Fletcher Parts

Part Number	Description
120826	Nut
124035	Snap Ring
141522	Bushing
143808	Pump
143898	Pump
144181	Chain Assembly
149011	Tape Switch
149012	Tape Switch
150273	Filter
153781	O'Ring Kit
161022	Flinger
168798	Keeper
171372	Flinger
173416	Shaft Block Assembly
17768	Stud Bolt
17769	Nut
17808	Muffler
17820	Clevis Pin
181349	Cover
181350	Socket Shaft
181397	Seal Ring
18336	Brass Cap Screw
187938	Gasket
188201	Seal
188761	Roller Assembly
188800	Wear Pad
188801	Wear Strip
188804	Shim
188806	Shim
188807	Shim
189148	Drill Chuck
191042	Gasket
194571	Hub
198315	Gasket
199871	Cover

# PARTS LIST

## Fletcher Parts

Part Number	Description
20019	Bolt
202049	Washer
203263	Retainer
203265	Water Jet
20352	Hose Insulator
2072	Washer
20794	Nut
20808	Nut
20900	Nut
20901	Nut
20903	Nut
20904	Nut
20934	Nut
21025	Nut
21095	Nut
21257	Seal
21586	Spacer
21621	Spacer
21631	Spacer
21707	Spacer
21712	Bushing
21844	Spacer
21859	Spacer
21901	Spacer
22022	Lockwasher
22056	Washer
22196	Washer
22499	Felt Ring
22979	Spring
23869	Key
24037	Retaining Ring
24050	Snap Ring
24082	Snap Ring
24133	Retaining Ring
24344	Packing Seal
24405	Quad Seal

# PARTS LIST

## Fletcher Parts

Part Number	Description
2445	Snap Ring
2446	Snap Ring
2476	Snap Ring
24866	Screw
2492	Snap Ring
25214	O Ring
25216	Seal
25234	O Ring
25470	Pin
296727	Shaft/Sprocket Assembly
30314	Pin
30378	Link
30422	Pin
30620	Shaft
30682	Shaft
30683	Pin
31120	Lock Ring
31122	Screw and Nut
31124	Push Rod
31179	Index Pin
31454	Valve
31468	Flow Control
31569	Valve
31577	Check Valve
32016	Piston
32017	Piston
32733	Plug
33020	Connector
33031	Connector
33035	Cable
33037	Tee
33274	Pin
33327	Pin
33328	Pin
33333	Pin
33334	Pin

# PARTS LIST

## Fletcher Parts

Part Number	Description
33345	Pin Assembly
33391	Pin
33419	Pin
33466	Pin
33545	Pin
33569	Pin
33575	Cotter Pin
33815	Stud
33908	Stud Bolt
34008	Shaft
34022	Shaft
34072	Pin
35052	Retainer
35073	Seal
35074	Ring
353053	Brake Caliper
35493	Pin
35593	Pin Assembly
35596	Pin Assembly
35598	Pin
35612	Pin Assembly
35658	Pin
35659	Pin
35661	Pin
35667	Pin
35899	Pin
35986	Pin
35997	Pin
360321	Cross Head Assembly
36329	Pin
36927	Valve
37194	Valve
37765	Valve
40117	Bearing
40156	Bearing
40167	Bearing

# PARTS LIST

## Fletcher Parts

Part Number	Description
40202	Bearing
40214	Bearing
40217	Bearing
40235	Bearing
40340	Bushing
40398	Bushing
40399	Bushing
40402	Bushing
40480	Bushing
40713	Chain
41268	Gear Set
41597	Handle
41604	Link
41644	Lower Pivot
41692	Spool Clevis
41849	Drill Pot Motor
42043	Pump
42200	Pump
43139	Sprocket
43209	Sprocket
43231	Sprocket
43233	Sprocket
43343	Sprocket
43419	Sprocket
44288	Cross Head
45369	Bumper
45427	Bumper
45498	Bearing
45775	Roller
45814	Roller
45838	Roller Assembly
45839	Roller Assembly
45895	Roller
45957	Roller
4608	Roller
46294	Pin

# PARTS LIST

## Fletcher Parts

Part Number	Description
46331	Shaft
46346	Pin
46611	Switch
46617	Cover
46718	Tape Switch Plug-in
46719	Tape Switch
46907	Filter Assembly
47745	Switch
49022	Eye
49396	Relay
49397	LED Light
49412	Relay Assembly
49413	Gland
49419	Relay
49520	Switch
49820	Magnet
51436	Latch
51462	Adaptor
51479	Gasket
53489	Muffler
53787	Brake
53821	Master Cylinder
53953	Relay
55008	Gear
55009	Gear Set
55012	Gear
56231	Cyclone
56272	Cyclone
56362	Cyclone
60996	Spacer
63905	Spacer
64	Axle Nut
65	Nut
72753	Sleeve
78032	Bar
78035	Leveling Rod

# PARTS LIST

## Fletcher Parts

Part Number	Description
80441	Adaptor
80453	Trunion
80455	Trunion
82526	Cap
82551	Retainer
82578	Retainer
8352	Keeper
84151	Spacer
88200	Cap
93148	Wear Strip
94300	Drill Chuck
94300+2	Deep Drill Chuck
94300+2C	Combination Chuck
94300N	Drill Chuck
94300N7/8+2	Drill Chuck
99486	Plug Assembly
99651	Chain Anchor RH
99652	Chain Anchor LH

# PARTS LIST

## Joy Parts

Part Number	Description
00000381-0000	Brake
000004.1-0000	T-Pin
000004.1-0CSC	T-Pin
00002697-0009	Seal Wire
00002852-0000	Screw
00005298-0000	Guide
00005328-0100	Roller Chain
00005328-0114	Chain
00006216-0000	Washer
00006364-0005	Shim
00010237-0000	Spring
00010355-0000	Collar
00010373-0000	Plug
00010870-0000	Packing Gland
00010871-0000	Clamp
00011045-0000	Spring
00012545-0001	Packing Box
00012545-0002	Packing Box
00012545-0003	Packing Box
00012545-0008	Packing Box
00012545-0011	Packing Box
00014111-0000	Pin
00014127-0000	Sideboard
00014190-0011	Angle
00016052-0000	Ball
00016053-0000	Slot Jam Nut
00016111-0000	Pin
00016113-0000	Plug
00016114-0000	Spring
00016115-0000	Seat
00021251-0000	Washer
00022595-0000	Collar
00022962-0000	Arm
00023202-0000	Bushing
00023228-0000	Roller Link

# PARTS LIST

## Joy Parts

Part Number	Description
00023228-0002	Connecting Link
00023228-0010	Att. Link
00023230-0000	Bushing
00023547-0000	Bearing Block
00024227-0000	Bushing
00024894-0000	Rocker
00025749-0000	Spring
00026072-0000	Collector Ring
00026073-0000	Insulator
00026074-0000	Insulator
00026309-0000	Moveable Contact
00026314-0000	Stationary Contact
00026794-0000	Spring Collector
00026903-0014	Sprocket
00029113-0000	Pin
00030752-0000	Clutch Plate
00030753-0000	Clutch Plate
00031080-0000	Bushing
00032855-0000	Fitting
00034033-0000	Spacer
0003868X-0000	Sprocket
00043118-0020	Shim
00043424-0000	Bushing Steer Shaft
00049161-0000	Cable
00052318-0000	Bushing
00052895-0000	Retainer
00052912-0000	Shim
0005297X-0000	Hardened Bushing
00053080-0000	Bushing Axle
00057765-0000	Cable
00058341-0000	Spooling Shaft
00059135-0000	Bushing
00059170-0000	Washer
00061752-0000	Spacer
00061799-0000	Shim
00061872-0000	Sideboard
00062901-0000	Sideboard
00063143-0000	Pinion

# PARTS LIST

## Joy Parts

Part Number	Description
00063146-0000	Gear
00063149-0000	Shaft
00063364-0007	Shim
00063364-0020	Shim
00063365-0005	Shim
00063365-0007	Shim
00063365-0020	Shim
00063366-0005	Shim
00063366-0007	Shim
00063563-0000	Bushing
00065137-0000	Strap
00093145-0000	Gear
00132172-0000	Bracket
00177466-0000	Bushing
00182168-0000	Gibb
00188981-0000	Pin
003868X1-0000	Sprocket
003868X3-0000	Sprocket
003868X7-0000	Sprocket
00480228-0000	Clutch Plug
00500112-0228	Jack
00500140-0578	Cylinder
00500140-1012	Cylinder
00500140-1242	Steer Cylinder
00500140-4550	Cylinder
00500149-0438	Resistor
00500524-0285	Foot Switch
00500524-0329	Station
00500524-189K	E-Stop Kit
00500527-0160	Resistor
00503008-0020	Hand Pump
00503014-0064	Relief Valve
00503016-0037	Brake
00503043-0012	Valve
00503043-0020	Check Valve
00503044-0008	Flow Valve
00503071-0035	Hyd. Motor
00505538-0070	Roller

## PARTS LIST

### Joy Parts

Part Number	Description
00506203-0004	Valve
00506215-0007	Motor
00506215-0031	Reel Motor
00506220-0006	Pump
00506227-0028	Pump
00506248-0014	Pump
00506248-0040	Pump
00507324-0000	U-Bolt
00507324-0001	U-Bolt
00507771-0072	Guide
00507771-0090	Guide
00507771-0102	Cable Guide
00507771-0103	Cable Guide
00507771-0104	Cable Guide
00507974-0020	Drag Link
00507974-0021	Drag Link
00507974-0023	Drag Link
00507974-0026	Drag Link
00507974-0030	Drag Link
00507974-0031	Drag Link
00507974-0061	Drag Link
00507974-0064	Drag Link
00507974-0065	Drag Link
00507974-0066	Drag Link
00507974-0067	Drag Link
00507974-0068	Drag Link
00507974-0069	Drag Link
00507974-0070	Drag Link
00509129-0019	Cat Chain
00509129-0020	Cat Chain
00509157-4060	Conveyor Chain
00509157-4066	Conveyor Chain
00509197-0006	Chain
00509197-0072	Chain
005297XS-0000	Bushing
005299AS-0000	Pin Index Steel
00530553-0037	In-Line Filter
00530553-0048	Filter Assy.

## PARTS LIST

### Joy Parts

Part Number	Description
00530553-0099	Filter Housing
00530634-0000	Attch Roller Link
00530680-0006	Steering Valve
00530680-0009	Steer Valve
00531086-0004	Hand Pump
00531086-0006	Hand Pump
00531601-0005	Valve
00531676-0008	Spider
00531678-0019	Drive Shaft
00531678-0025	Drive Shaft
00531678-0029	Drive Shaft
00531678-0030	Drive Shaft
00531678-0062	Drive Shaft
00531678-0063	Drive Shaft
00531678-0074	Drive Shaft
00531678-0076	Drive Shaft
00531678-0082	Drive Shaft
00531678-0083	Drive Shaft
00531678-0092	Drive Shaft
00531840-0004	Roller Assy.
00531840-0008	Roller
00531873-0002	Cartridge
00531873-0005	Valve
00531873-0007	Valve
00532143-0000	Rod
00532170-0013	Valve Assy.
00532479-0006	Repair Kit
00532479-0009	Repair Kit
00532520-0004	Filter
00532977-0002	Valve
00533020-0254	Cover
00533020-0255	Cover W/Hole
00533291-0000	Drum Switch
00533537-0013	Brake Caliper Assy.
00533537-0014	Brake
00533583-0004	Relief Valve
00533850-0000	Sprocket
00533854-0005	Plate

## PARTS LIST

### Joy Parts

Part Number	Description
00533854-0006	Plate
00533857-0000	Bell Joint
00533872-0001	Valve
00533872-0002	Valve
00533872-0018	Water Valve
00534042-0014	Master Cylinder
00534042-0019	Master Cylinder
00534042-0021	Master Cylinder
00534087-0002	Cable Stand Off
00534087-0005	Cable Stand Off
00534087-000S	Cable Stand Off
00534087-002M	Cable Stand Off
00534371-0000	Joint
00534402-0000	Bell Joint
00534428-0002	Valve
00534613-0020	Valve
00534613-0021	Valve
00534613-0022	Valve
00534613-0023	Valve
00534613-0024	Valve
00534614-0002	Valve
00534614-0008	Valve
00534643-0000	Cover
00534656-0000	Seat Pad
00534886-0000	Valve
00534886-0008	Valve Stem
00570087-0000	Brake Valve
00570087-0006	Valve
00570340-0000	Slip Joint
00570425-0000	Hanger
00570438-0001	Cylinder
00570438-0002	Cylinder Metric
00570438-0005	Take Up Jack
00570452-0020	Cable Assembly
00570452-0029	Cable
00570452-0059	Cable Assembly
00570452-0107	Cable Assy.
00570468-0001	Strainer

## PARTS LIST

### Joy Parts

Part Number	Description
00570553-0002	Valve
00570554-0002	Body & Coil Assy.
00570555-0003	Valve Stem Assy.
00570555-0005	Stem
00570585-0000	Clutch Kit
00570598-0001	Pin Assy
00570598-0002	Pin Assy
00570598-0003	Pin Assy
00571130-0000	Bearing Carrier
00571238-0000	Clamp
00571286-0005	Repair Kit
00571286-0006	Lining
00571297-0013	Core Breaker
00571345-0027	Tram Chain
00571345-0028	Chain
00571345-0032	Tram Chain
00571378-0007	Demister
00571378-0009	Demister
00571379-0112	Screen
00571379-0113	Screen
00571379-0114	Screen
00571379-0118	Screen
00571379-0212	Screen
00571379-0213	Screen
00571379-0218	Screen
00571379-0220	Screen
00571379-0512	Screen
00571380-0001	Pump
00571455-0004	LH Retainer
00571455-0005	RH Retainer
00571518-0006	Clevis
00571567-0000	Wrench
00571618-0004	Guide RH
00571618-0010	Guide RH
00571619-0003	Guide LH
00571619-0004	Guide LH
00571619-0010	Guide LH
00571658-0060	Clutch Kit

## PARTS LIST

### Joy Parts

Part Number	Description
00571658-4127	Output Hub
00571668-0000	Relief Valve
00571686-0000	Filter
00571766-0000	Socket
00571766-0001	RH Drag
00571766-0002	Repair Kit
00571766-0003	Repair Kit
00571778-0012	Seat
00571845-0000	Steering Valve
00571865-0000	Housing
00571892-0000	Water Filter Assy.
00571905-0000	Seat
00571905-0006	Seat
00571909-0000	Seal Kit
00571909-0004	Stack Kit
00571912-0008	Valve
00571912-0009	Valve
00571961-0004	Pump
00572100-0004	Water Strainer
00600007-0197	Socket
00600007-0718	Level Switch
00600007-0950	Strap
00600033-0243	Transformer
00600046-0003	Mercury Tube
00600046-0004	Mercury Tube
00600046-0005	Mercury Tube
00600046-0006	Mercury Tube
00600046-0008	Tube
00600046-0026	Tube
00600457-0002	Motor
00600744-0250	Relay
00601054-0059	Relay
00601054-0091	Socket
00601056-0004	Switch
00601336-0022	Cable
00601352-0008	Cable
00601506-0127	Switch
00601506-0128	Switch

# PARTS LIST

## Joy Parts

Part Number	Description
00601506-0133	Switch
00601506-0150	Switch
00601506-0156	Switch
00601506-0162	Switch
00601506-0236	Switch
00601506-0237	Switch
00601506-0239	Switch
00601506-0252	Switch
00601506-0264	Switch
00601506-0265	Switch
00601506-0270	Switch
00601506-0285	Switch
00601506-0286	Switch
00601506-0334	Switch
00601506-0339	Switch
00601506-0350	Switch
00601506-0356	Switch
00601506-0359	Switch
00601506-0372	Switch
00601506-0374	Switch
00601525-0008	Contactactor
00601547-0025	Heater
00601547-0038	Heater
00601547-0042	Heater
00601547-0047	Heater
00601547-0048	Heater
00601547-0050	Heater
00601547-0052	Heater
00601547-0075	Heater
00601547-0080	Heater
00601547-0081	Heater
00601547-0085	Heater
00601547-0088	Heater
00601547-0091	Heater
00601548-0011	Contactactor Kit
00601548-0013	Kit
00601548-0033	Interlock
00601548-0046	Relay

# PARTS LIST

## Joy Parts

Part Number	Description
00601548-0070	Arc Box
00601548-0084	Contact Kit
00601548-0086	Contact Kit
00601548-0138	Interlock
00601549-0022	4-4 Cable
00601564-0043	Transformer
00601589-0002	Cable
00601589-0006	Cable
00601708-0002	Cable
00601821-0013	Contact Kit
00601823-0013	Contact Kit
00601824-0001	Contact
00601826-0001	Washer
00601826-0002	Spring
00601826-0011	Spring
00601826-0012	Spring Return
00601826-0014	Contact Stationary
00601826-0016	Contact
00601826-0017	Clip RH
00601826-0018	Spacer
00601826-0019	Clip LH
00601826-0020	Arc Box
00601826-0021	Contact
00601826-0026	Interlock
00601843-0015	Cable Assy
00601843-0028	Antenna
00601843-0034	Cable Assy
00601843-0123	Antenna
00601843-0139	Antenna
00601843-0146	Cable Assy
00601843-0186	Cable Assy
00601843-0244	Cable
00601843-0245	Cable
00601843-0246	Cable
00601843-0248	Cable
00601843-0251	Antenna
00601875-0084	Cable Assy
00601878-0021	Vacuum Contactor

# PARTS LIST

## Joy Parts

Part Number	Description
00603002-0003	Breaker
00603008-0002	Breaker
00603012-0003	Breaker
00603012-0004	Breaker
00603030-0007	Cable
00900012-0003	HHC Screw
00900012-0024	HHC Screw
00900042-0024	HHC Screw
00900042-0135	HHC Screw
00900042-0148	HHC Screw
00900042-0218	HHC Screw
00900050-0025	Bolt
00900169-0005	Hex Nut
00900212-0005	Nut
00900212-0007	Nut
00900317-0011	Washer
00900322-0016	Washer
00900322-0017	Flat Washer
00900322-0019	Washer
00900448-0004	Clevis Pin
00900470-0004	Clevis Yoke
00900470-0006	Clevis Yoke
00900620-0082	Cotter Pin
00900947-0081	Key
00900948-1057	Key
00900969-0230	Key
00900969-0334	Key
00900969-1054	Key
00900969-1140	Key
00900970-0230	Key
00900970-1055	Key
00900970-1109	Key
00900970-1111	Key
00900970-1117	Key
00901261-0001	1/8" Fitting
00901690-0206	Snap Ring
00901924-0002	Pipe Plug
00901924-003	Pipe Plug

# PARTS LIST

## Joy Parts

Part Number	Description
00902095-0075	Retaining Ring
00902095-0112	Retaining Ring
00902095-0118	Retaining Ring
00902095-0156	Retaining Ring
00902095-0175	Retaining Ring
00902095-0187	Retaining Ring
00902095-0237	Retaining Ring
00902095-0250	Retaining Ring
00902095-0312	Retaining Ring
00902095-0334	Retaining Ring
00902095-0350	Retaining Ring
00902109-0175	Retaining Ring
00902109-0187	Retaining Ring
00902109-0200	Retaining Ring
00902109-0225	Retaining Ring
00902109-0275	Retaining Ring
00902109-0354	Retaining Ring
00902109-0362	Retaining Ring
00902109-0393	Retaining Ring
00902109-0400	Retaining Ring
00902109-0412	Retaining Ring
00902109-0433	Retaining Ring
00902140-0001	Fitting
00902140-0002	Fitting
00902140-0003	Fitting
00902190-0097	Cap Screw
00902190-051B	BHC Screw
00902224-0051	Cap Screw
00902224-0060	Cap Screw
00902224-0062	Cap Screw
00902224-0073	Cap Screw
00902224-0084	Cap Screw
00902224-0095	SHC Screw
00902224-0117	Cap Screw
00902224-0823	Cap Screw
00902224-0852	Cap Screw
00902224-0854	Cap Screw
00902224-0857	Cap Screw

## PARTS LIST

### Joy Parts

Part Number	Description
00902224-0859	SHC Screw
00902224-0891	SHC Screw
00902224-0897	SHC Screw
00902224-0899	SHC Screw
00902224-0928	SHC Screw
00902224-0930	SHC Screw
00902224-0933	SHC Screw
00902224-0934	SHC Screw
00902224-0936	SHC Screw
00902224-0968	SHC Screw
00902301-1004	O-Ring
00902361-0002	Header Block
00902361-0003	Header Block
00903103-0002	Fitting
00903103-0005	Fitting
00903113-0008	Lock Nut
00903115-0007	Lock Nut
00903115-0008	Lock Nut
00903115-0010	Lock Nut
00903119-0010	Nylock Nut
00903119-0012	Nut
00903458-0004	Breather
00903458-0005	Vent
00903458-0006	Breather
00903458-0010	Vent
00903458-0011	Air Vent
00903458-0012	Vent
00903630-0137	Snap Ring
00903775-0137	Bushing
00904584-0037	Dowel
00904604-0003	Nut
00904604-0005	Nut
00904685-0151	Roll Pin
00904685-0152	Spring Pin
00904685-0198	Roll Pin
00904685-0350	Spring Pin
00905000-1500	Plug
00905361-0800	Snap Ring

## PARTS LIST

### Joy Parts

Part Number	Description
00905361-0925	Ret. Ring
00905362-0250	Snap Ring
00905478-0425	Ret. Ring
00905619-0132	Cable Push/Pull
00905619-0144	Cable Push/Pull
00905619-0200	Cable Push/Pull
00905784-0049	Strainer
00905784-0051	Y Strainer
00905987-0003	Spring
00906361-0007	Washer
00906361-0010	Washer
00906361-0012	Washer
00906512-0168	Snap Ring
00907863-0033	O-Ring
00908388-0022	O-Ring
00908388-0243	Backup Ring
00908388-0247	Backup Ring
00908889-0029	Ring
00908889-0035	Ring
00908889-2500	Rod Wiper
00909137-0036	Collar
00910656-0230	O-Ring
00910657-0339	O-Ring
00910660-0010	O-Ring
00910660-0022	O-Ring
00910660-0032	O-Ring
00910660-0036	O-Ring
00910660-0128	O-Ring
00910660-0140	O-Ring
00910660-0144	O-Ring
00910660-0145	O-Ring
00910660-0157	O-Ring
00910660-0159	O-Ring
00910660-0168	O-Ring
00910660-0213	O-Ring
00910660-0220	O-Ring
00910660-0222	O-Ring
00910660-0223	O-Ring

# PARTS LIST

## Joy Parts

Part Number	Description
00910660-0224	O-Ring
00910660-0226	O-Ring
00910660-0230	O-Ring
00910660-0233	O-Ring
00910660-0235	O-Ring
00910660-0236	O-Ring
00910660-0237	O-Ring
00910660-0238	O-Ring
00910660-0239	O-Ring
00910660-0242	O-Ring
00910660-0244	O-Ring
00910660-0245	O-Ring
00910660-0246	O-Ring
00910660-0247	O-Ring
00910660-0249	O-Ring
00910660-0250	O-Ring
00910660-0251	O-Ring
00910660-0253	O-Ring
00910660-0254	O-Ring
00910660-0258	O-Ring
00910660-0259	O-Ring
00910660-0260	O-Ring
00910660-0261	O-Ring
00910660-0263	O-Ring
00910660-0265	O-Ring
00910660-0266	O-Ring
00910660-0269	O-Ring
00910660-0270	O-Ring
00910660-0271	O-Ring
00910660-0273	O-Ring
00910660-0274	O-Ring
00910660-0275	O-Ring
00910660-0276	O-Ring
00910660-0277	O-Ring
00910660-0278	O-Ring
00910660-0279	O-Ring
00910660-0280	O-Ring
00910660-0284	O-Ring

# PARTS LIST

## Joy Parts

Part Number	Description
00910660-0336	O-Ring
00910660-0347	O-Ring
00910660-0361	O-Ring
00910660-0363	O-Ring
00910660-0370	O-Ring
00910660-0372	O-Ring
00910660-0389	O-Ring
00910660-0390	O-Ring
00910660-0391	O-Ring
00910660-0429	O-Ring
00910660-0437	O-Ring
00910660-0438	O-Ring
00910660-0440	O-Ring
00910660-0441	O-Ring
00910660-0442	O-Ring
00910660-0443	O-Ring
00910660-0443	O-Ring
00910660-0444	O-Ring
00910660-0445	O-Ring
00910660-0447	O-Ring
00910660-0450	O-Ring
00910660-0454	O-Ring
00910660-0457	O-Ring
00910660-0458	O-Ring
00910660-0463	O-Ring
00913123-0007	Cat Seal
00913123-0009	Cat Seal
00913128-0010	Cat Seal
00913128-0011	Cat Seal
00913128-0012	Cat Seal
00913128-0013	Cat Seal
00913131-0008	Cat Seal
00913131-0009	Cat Seal
00913131-0013	Cat Seal
00913131-0015	Cat Seal
00913131-0018	Cat Seal
00913131-0030	Cat Seal
00913134-0007	Cat Seal

# PARTS LIST

## Joy Parts

Part Number	Description
00914478-0142	Poly Seal
00914478-0146	Poly Seal
00914478-0152	Poly Seal
00914478-0178	Poly Seal
00915752-0410	Flat Pin
00915785-0012	Valve
00917153-1240	Seal
00917854-0194	Cable
00917854-0216	Cable
00917983-0178	Seal
00925082-0120	Lock Washer
00925435-1200	Nut
00925435-1600	Nut
00925435-2400	Hex Nut
00925436-1200	Nut
00925439-2400	Nut
00925441-1219	Bolt
00925441-1250	Bolt
00925441-1617	Bolt
00925441-1624	Bolt
00925441-1626	Bolt
00925441-2426	Bolt
00925441-2438	Bolt
00925442-1219	Bolt
00925442-1222	Bolt
00925443-1219	Bolt
00925443-1617	Bolt
00925447-1219	Bolt
00925447-1226	Bolt
00925447-1619	Bolt
00925447-1624	Bolt
00925447-2022	Bolt
00925447-2033	Bolt
00925447-2426	Bolt
00925447-2430	Bolt
00925447-2433	Bolt
00925450-1222	Bolt
00925490-1215	Dowel

## PARTS LIST

### Joy Parts

Part Number	Description
00925496-3600	Flat Washer
00925498-1200	Flat Washer
00925498-1600	Flat Washer
00925498-2400	Flat Washer
00925499-1200	Lock Washer
00925499-1600	Lock Washer
01003868-0009	Sprocket
01003868-0010	Sprocket
01003868-0012	Sprocket
01003868-0014	Sprocket
01003868-0019	Sprocket
01003868-0024	Sprocket
01003868-0031	Sprocket
01003868-0036	Sprocket
01026309-0001	Contact Tip
01026314-0001	Contact Tip
01027185-0002	Ring
01029105-0004	Roller
01029113-0001	Pin
01035576-0001	Spooling Shaft
01039703-0002	Pin
01039745-0002	Packing Gland
01039745-0003	Nut
01040645-0005	Take Up Rod
01040645-0008	Take Up Rod
01046348-0006	Manifold
01046348-0015	Spray Block
01046348-0019	Spray Block
01046348-0037	Spray Block
01046348-0183	Spray Block
01046348-0278	Spray Block
01052914-0001	Shaft
01052914-0031	Shaft
01052914-0032	Shaft
01053309-0001	Clevis
01053309-0003	Clevis
01054077-0001	Clevis
01059169-0006	Pin

# PARTS LIST

## Joy Parts

Part Number	Description
01061872-0001	Sideboard
01064411-0001	Boom Pin
01064411-0006	Boom Pin
01064411-0008	Boom Pin
01064938-0013	Shaft
01064938-0014	Shaft
01064938-0033	Shaft
01064938-0034	Shaft
01064938-0036	Shaft
01065640-0057	Flange
01065640-0058	Flange
01065640-0060	Flange
01065640-0063	Flange
01065640-0064	Flange
01065640-0065	Flange
01065640-0078	Flange
01065943-0000	Wedge
01065943-0004	Wedge
01065948-0000	Lock
01065949-0000	Shaft
01066042-0000	Bushing
01066043-0000	Lock
01067605-0001	Element Assy.
01067605-0017	Strainer
01068522-0000	Plate
01068522-0003	Plate
01069023-0016	Arm
01069023-0017	Arm
01069038-2003	Bar Assy.
01069038-2007	Bar Assy.
01069066-0001	Screw Block
01069085-0011	Bolt
01069085-0026	Bolt
01069085-0029	Bolt
01069085-0035	Bolt
01069085-0072	Bolt
01069095-0004	Packing Box
01069095-0105	Packing Box

# PARTS LIST

## Joy Parts

Part Number	Description
01069095-0109	Packing Box
01069119-0078	Bracket
01069119-0429	Bracket
01069123-0026	Bumper
01069125-0045	Bushing
01069125-0092	Bushing
01069125-0093	Bushing
01069125-2039	Bushing
01069127-0063	Bushing
01069127-0195	Bushing
01069127-0213	Bushing
01069127-0250	Bushing
01069127-0252	Bushing
01069127-0285	Bushing
01069127-0286	Bushing
01069127-0349	Bushing
01069127-0356	Bushing
01069127-0372	Bushing
01069127-0374	Bushing
01069127-0411	Bushing
01069127-0412	Bushing
01069127-2152	Bushing
01069128-0028	Bushing
01069128-0042	Bushing
01069128-0164	Bushing
01069128-0187	Bushing
01069128-0202	Bushing
01069128-0212	Bushing
01069128-0246	Bushing
01069135-2000	Cam
01069135-2001	Cam
01069140-0124	Cap
01069140-0157	Cap
01069140-0166	Cap
01069140-0168	Cap
01069140-0189	Cap
01069140-0191	Cap
01069140-0217	Cap

# PARTS LIST

## Joy Parts

Part Number	Description
01069140-0229	Cap
01069140-0243	Cap
01069140-0353	Cap
01069140-0383	Cap
01069140-0440	Cap
01069140-0441	Cap
01069140-0458	Cap
01069140-0477	Cap
01069140-0521	Cap
01069140-2055	Cap
01069141-0031	Cap
01069141-0044	Cap
01069142-0002	Cap
01069143-0032	Cap
01069145-0214	Carrier
01069145-0217	Carrier
01069145-0584	Carrier
01069145-2012	Carrier
01069145-2020	Carrier
01069145-2025	Carrier
01069145-2041	Carrier
01069146-0009	Carrier
01069146-0010	Carrier
01069160-0032	Clamp
01069160-2004	Split Collar
01069160-2078	Clamp
01069180-0010	Collar
01069180-0013	Collar
01069230-0161	Adapter
01069241-0002	Flange
01069241-0005	Flange
01069242-0066	Flange
01069277-0024	Worm Shaft
01069277-0025	Worm Shaft
01069278-0020	Worm Gear
01069278-0021	Worm Gear
01069296-0004	Guide
01069296-0005	Guide

# PARTS LIST

## Joy Parts

Part Number	Description
01069296-0023	Guide
01069367-0021	Keeper
01069367-0036	Keeper
01069367-0040	Keeper
01069367-0043	Keeper
01069367-0072	Keeper
01069367-0073	Keeper
01069367-0097	Keeper
01069367-0106	Keeper
01069367-0170	Keeper
01069367-0199	Keeper
01069367-2092	Keeper
01069367-2222	Keeper
01069368-0003	Key
01069368-0010	Key
01069368-0012	Key
01069368-0040	Key
01069385-0073	Lever
01069385-0077	Lever
01069398-0010	Nut
01069398-0021	Nut
01069398-0040	Nut
01069398-0043	Nut
01069398-0052	Nut
01069398-0055	Nut
01069406-0023	Nut
01069427-0067	Pin
01069427-0236	Pin
01069427-2013	Pin
01069428-0036	Pin
01069428-0102	Pin
01069432-0156	Pin
01069432-0186	Pin
01069432-0194	Pin
01069432-0195	Pin
01069432-0203	Pin
01069432-0209	Pin
01069432-0222	Pin

# PARTS LIST

## Joy Parts

Part Number	Description
01069432-0268	Pin
01069432-0334	Pin
01069432-0386	Pin
01069432-0471	Pin
01069432-0472	Pin
01069432-0513	Pin
01069432-0644	Pin
01069432-0687	Pin
01069432-0691	Pin
01069432-0706	Pin
01069432-0760	Pin
01069432-0761	Pin
01069432-0846	Pin
01069432-0938	Pin
01069432-0949	Pin
01069434-0001	Pin
01069434-0084	Pin
01069434-0086	Pin
01069434-0121	Pin
01069434-0132	Pin
01069434-0146	Pin
01069434-0147	Pin
01069434-0164	Pin
01069434-0184	Pin
01069434-0200	Pin
01069434-0201	Pin
01069434-0205	Pin
01069434-0247	Pin
01069434-0277	Pin
01069434-0281	Pin
01069434-0282	Pin
01069434-0283	Pin
01069434-0361	Pin
01069434-0375	Pin
01069434-0391	Pin
01069434-0392	Pin
01069434-1337	Pin
01069434-1344	Pin

# PARTS LIST

## Joy Parts

Part Number	Description
01069434-1521	Pin
01069446-0007	Plate
01069450-0006	Plug
01069452-0082	Plug
01069484-0014	Rod
01069484-0022	Cross Bar
01069506-0006	Screen
01069515-0136	Gasket
01069526-0054	Shaft
01069526-0193	Shaft
01069526-0469	Pin Deck
01069526-0476	Shaft
01069526-0478	Take Up Shaft
01069526-0479	Take Up Shaft
01069526-2001	Pin
01069527-0093	Shaft
01069527-0253	Shaft
01069527-2019	Shaft
01069528-0009	Shaft
01069528-0145	Shaft
01069528-0172	Shaft
01069528-0175	Shaft
01069528-0230	Shaft
01069528-0253	Shaft
01069528-0259	Shaft
01069528-0416	Shaft
01069528-0429	Torque Shaft
01069528-0459	Torque Shaft
01069528-0462	Spline Shaft
01069528-0467	Torque Shaft
01069528-0513	Torque Shaft
01069528-0529	Torque Shaft
01069528-2001	Shaft
01069528-2013	Torque Shaft
01069528-2050	Splined Shaft
01069528-2052	Torque Shaft
01069528-2053	Torque Shaft
01069528-2054	Torque Shaft

# PARTS LIST

## Joy Parts

Part Number	Description
01069528-2064	Steer Shaft
01069528-2066	Steer Shaft
01069528-2116	Shaft
01069528-2126	Splined Shaft
01069528-2174	Torque Shaft
01069528-2193	Torque Shaft
01069528-2198	Shaft
01069528-2217	Shaft
01069529-0006	Spooling Shaft
01069530-0046	Sheave Wheel
01069530-0058	Sheave Wheel
01069530-0068	Sheave Wheel
01069530-0425	Sheave Wheel
01069530-0426	Sheave Pin
01069533-0153	Shim
01069533-0154	Shim
01069533-0155	Shim
01069533-0267	Shim
01069533-0268	Shim
01069533-0269	Shim
01069533-0340	Shim
01069533-0345	Shim
01069533-0350	Shim
01069533-0353	Shim
01069533-0373	Shim
01069533-0374	Shim
01069533-0375	Shim
01069533-0376	Shim
01069533-0377	Shim
01069533-0452	Shim
01069533-0453	Shim
01069533-0454	Shim
01069533-0455	Shim
01069533-0456	Shim
01069540-2033	Cla Tip
01069540-2034	Cla Tip
01069540-2037	Cla Tip
01069540-2038	Cla Tip

# PARTS LIST

## Joy Parts

Part Number	Description
01069540-2039	Cla Tip
01069540-2040	Cla Tip
01069545-0007	Sideboard
01069545-0012	Sideboard
01069556-0010	Rod End RH
01069556-0011	Rod End LH
01069561-0010	Plate
01069561-0011	Plate
01069565-0221	Spacer
01069565-0272	Spacer
01069565-0284	Spacer
01069565-0319	Washer
01069565-0322	Spacer
01069565-0419	Spacer
01069565-0477	Spacer
01069565-0599	Spacer
01069565-0757	Spacer
01069565-0871	Spacer
01069566-0311	Spacer
01069566-0345	Spacer
01069566-0384	Spacer
01069566-0408	Washer
01069566-0512	Spacer
01069585-0001	Spring
01069585-0039	Spring
01069585-0090	Spring
01069587-0009	Spring
01069588-0002	Spring
01069600-0202	Wear Strip
01069625-0042	Spacer
01069625-0047	Spacer
01069625-0067	Spacer
01069629-0086	Tube
01069630-0133	Spacer
01069630-0134	Spacer
01069632-0008	Washer
01069700-0068	Gear
01069700-0083	Shaft

# PARTS LIST

## Joy Parts

Part Number	Description
01069700-0102	Gear
01069701-0016	Center Pinion
01069701-0023	Shaft
01069701-0026	Shaft
01069701-0078	Spur Gear
01069701-0112	Shaft
01069701-0145	Shaft
01069701-0146	Gear
01069701-0148	Gear
01069702-0011	Gear
01069702-0028	Gear
01069702-0029	Pinion Mtr
01069702-0039	Spur Gear
01069702-0047	Gear
01069702-0052	Gear
01069702-0115	Pinion Brk
01069702-0120	Pinion Brk
01069702-0131	Gear
01069703-0012	Pinion
01069703-0014	Spur Gear
01069703-0032	Spur Gear
01069703-0062	Gear
01069703-0084	Gear
01069703-0098	Gear
01069703-0103	Sun Gear
01069703-0104	Pinion
01069703-0129	Gear
01069706-0006	Spur Gear
01069706-0007	Spur Gear
01069706-0008	Spur Gear
01069710-0023	Pinion
01069710-0024	Sun Gear
01069710-0032	Gear
01069710-0039	Gear
01069711-0017	Gear
01069712-0002	Pinion
01069712-0004	Pinion
01069717-0048	Gear

# PARTS LIST

## Joy Parts

Part Number	Description
01069718-0062	Pinion
01069762-0036	Bevel Gear
01069763-0027	Gear
01069763-0028	Bevel Gear
01069763-0031	Gear
01069764-0017	Pinion
01069764-0023	Bevel Gear
01069768-0014	Bevel Gear
01069787-0028	Pinion
01069787-0037	Bevel Gear
01069787-0042	Bevel Gear
01069812-0026	Sprocket
01069812-0028	Sprocket
01069812-0030	Sprocket
01069812-0031	Sprocket
01069812-0032	Sprocket
01069812-0033	Sprocket
01069812-0034	Sprocket
01069812-0036	Sprocket
01069812-0040	Sprocket
01069812-0044	Sprocket
01069812-0054	Sprocket
01069812-0056	Sprocket
01069812-0059	Sprocket
01069812-0060	Sprocket
01069812-0092	Sprocket
01069812-0094	Sprocket
01069821-0147	Sprocket
01069832-0052	Sprocket
01069842-0016	Straight Nut
01069842-0022	Tapered Nut
01069850-0112	Sprocket
01069855-0015	Strap
01069857-0022	Piston
01069902-0006	Gear
01069902-0010	Gear
01069903-0008	Gear
01069903-0009	Gear

# PARTS LIST

## Joy Parts

Part Number	Description
01069907-0008	Gear
01069908-0005	Gear
01069909-0002	Gear
01069914-0001	Gear
01069915-0005	Gear
01121821-0000	Brush
01121896-0000	Brush
01121897-0000	Brush Holder
01121898-0000	Clamp
01121978-0000	Brush Holder
01122022-0000	Insert
01122082-0000	Insert
01122135-0000	Spacer
01122153-0000	Insert
01122701-0005	Pump Shaft
01122727-0001	Insulator
01122752-0022	Shaft
01122770-0001	Plug
01122782-0002	Insert 6 Spline
01122782-0006	Insert 13 Spline
01122782-0007	Insert Conveyor
01124794-0015	End Cap
01189876-0148	Bushing
01189876-0149	Bushing
01189941-0275	Cover
01190062-0064	Roller
01190114-0001	Nozzle
01190114-0024	Nozzle
01190132-0103	Pin
01190194-0265	Rod
01190202-0028	Roller
01190202-0036	Roller
01190218-0024	Seal
01190230-0294	Shaft
01450955-0003	Journal Pin
01451181-0001	Bushing
01451193-0001	Roll Pin
01451432-0000	Pin

# PARTS LIST

## Joy Parts

Part Number	Description
01451476-0001	Lock Pin
01451898-0001	Roller
01451899-0001	Sprocket
01451909-0000	Cat Pad Pin
01451919-0000	Cat Pad Pin
01451998-0000	Roller Link
01451999-0000	Flight Roller Lk
01452018-0000	Cat Pad
01452019-0000	Cat Pad
01452023-0000	Pin
01452052-0000	Cat Pad
01452053-0000	Pin
01452105-0000	Insert
01452111-0000	Insert
01452124-0002	Insert
01452124-0028	Insert
01452124-0082	Insert
01560538-0000	Bar
01562748-0003	Disc
01563891-0000	Seal Retainer
01563891-0004	Retainer
01564062-0000	Carrier
01564265-1871	RH Block
01564265-1872	LH Block
01564315-0009	Split Collar
01564359-0003	Steer Lever
01564400-0004	Steer Saddle
01564431-0004	Arm
01564432-0005	Arm
01564433-0006	Arm
01564434-0005	Arm
01564435-0008	Sleeve
01564460-0001	Hub
01564625-0000	Seal Retainer
01564693-0000	Piston
01564693-0002	Piston
01564767-0002	Arm
01564767-0004	Arm

# PARTS LIST

## Joy Parts

Part Number	Description
01564767-0045	Arm
01564812-0000	Keeper
01564813-0083	Keeper
01565119-0001	Shaft
01565182-0000	Clamp
01565310-0005	Filter
01565310-0014	Filter
01565317-0005	Rod,Short
01565317-0006	Rod,Long
01565371-0000	Flange
01565371-0001	Flange
01565422-0140	Block
01565539-0006	Steer Saddle
01565540-0004	Steering Arm
01565541-0004	Steering Arm
01565542-0004	Steering Arm
01565543-0004	Steering Arm
01565677-0003	Solid Hub
01565677-2020	Hub
01565677-2022	Hub
01565722-0000	Seal Retainer
01565964-0003	Spacer
01566189-0101	Block
01566189-0102	Block
01566237-0000	Spray Nozzle
01566237-0002	Spray Nozzle
01566237-0006	Spray Nozzle
01566237-0013	Spray Nozzle
01566267-0000	Seal Retainer
01566267-0003	Ring
01566268-0000	Seal Retainer
01566268-0004	Retainer
01566308-2192	Keeper
01566308-2193	Keeper
01566308-2194	Keeper
01566322-2214	Detail
01566415-0002	Gland
01566416-0000	Clamp

## PARTS LIST

### Joy Parts

Part Number	Description
01566536-0000	Disc
01566810-0000	Plug
01566810-0002	Plug
01566939-0000	Brake Disc
01566959-0000	Split Collar
01566959-0003	Clamp
01567017-0000	Ring
01567078-0001	Guide
01567157-0000	Bleeder
01567433-0056	Bearing
01567456-0000	Element
01567473-0001	Belleville Spring
01567616-0033	Detail
01567619-0004	Gasket
01567619-0012	Spring
01567619-0045	Seperator Plate
01567619-0046	Seperator Plate
01567634-0001	Head Rest
01567640-0001	Packing
01567640-0002	Packing
01567640-0003	Packing
01567700-3479	Plate
01567700-3480	Plate
0159169-0006 BRY	Beryllium Pin
01700238-0000	Bushing
01700539-0000	Bushing
01700764-0000	Steel Packing Nut
01756707-0000	Sprocket
03022987-0038	Contactactor
03026566-0006	Valve
03026785-0018	Resistor
03026785-0021	Resistor
03026785-0022	Resistor
03040537-0001	Coil
03040645-0011	Takeup Rod
03061761-0006	Plate
03061762-0001	Pin
03061762-0004	Pin

# PARTS LIST

## Joy Parts

Part Number	Description
03064941-0001	Headshaft
03064941-0033	Headshaft
03064941-0034	Headshaft
03064941-0079	Headshaft
03064941-0080	Headshaft
03064941-0083	Headshaft
03064941-0084	Headshaft
03064941-0086	Headshaft
03069135-0001	Cam
03069135-0002	Spooler Cam
03069135-0003	Spooler Cam
03069140-0402	Cap
03069230-0216	Adapter
03069230-0350	Adapter
03069296-0093	Detail
03069296-0094	Detail
03069366-0002	Seal Kit
03069391-0020	Drag Link
03069391-0021	Drag Link
03069391-0022	Drag Link
03069391-0023	Drag Link
03069391-0024	Drag Link
03069391-0025	Drag Link
03069427-0280	Pin
03069427-0294	Pin
03069434-0085	Pin
03069455-0002	Plunger
03069468-0010	Lock
03069533-0308	Shim
03069533-0370	Shim
03069565-0704	Switch
03069629-0139	Tube assy.
03069717-0016	Gear
03069751-0002	Gear
03069751-0003	Gear
03069751-0005	Gear
03069751-0006	Gear
03069763-0029	Gear

## PARTS LIST

### Joy Parts

Part Number	Description
03069763-0030	Pinion
03069805-0020	Cluster Gear
03069805-0026	Pinion
03069805-0028	Cluster Gear
03069826-0007	Sprocket
03069826-0026	Sprocket
03069832-0067	Split Sprocket
03069841-0005	Sprocket Assy.
03069842-0003	Insert Puller
03069850-0139	Shaft
03069850-0141	Long Foot Shaft
03069850-0142	Headshaft
03069850-2001	Foot Shaft
03069874-0002	Valve
03190198-0025	Rod
03190767-0275	Cart.
03452124-0022	Bit Holder
03452124-0023	Lug
03564885-0014	Yoke
03564885-0015	Yoke
03567650-0001	Filter
03567690-0001	Disc Pack
03567690-0002	Disc Pack
05012250-0000	Connecting Link
05012266-0003	Flight
05012266-0004	Flight
05012266-0005	Flight
05012266-0006	Flight
100012470	Cable
100013729	Core Breaker
100031032	Sideboard
100032391	Sideboard
100038867	Sideboard
100041489	Wear Strip
100047386	Filter Element
100071253	Foot Shaft Assy.
100098165	Pipe Plug
100101537	Strap Set

## PARTS LIST

### Joy Parts

Part Number	Description
100101538	Strap Set
100118264	Yoke
100118265	Yoke
100126647	Cable Assy.
100133412	Bushing
100138297	Power Supply
100140990	Filter
100152470	Take Up Cylinder
100163003	Filter Element
100167450	Filter
100169662	Sideboard
100169663	Sideboard
100169744	Cylinder
100173563	Plate
100185138	Tube Shaft
100185863	Tape Switch
100199076	RH Chain Guide
100199077	LH Chain Guide
100205474	Boom Pin
100206087	Pin
100232620	Bit Block
100242210	Pin
100243058	Keeper
100279754	Chain Guide
100279755	Chain Guide
3/8" Steel Ball	Steel Ball
534643NI-0000	Special Cover
98-000646	Valve
98-005202	Remote Cable
98-006561	Push Pull Cable
98-007437	Plug
98-007444	Receptacle
98-008563	Receptacle
98-008565	Plug Assembly
98-190110067	Reducer
98-190110068	Reducer
98-2229B	Shoe
98-24442	Bed Plate Tube

# PARTS LIST

## Joy Parts

Part Number	Description
98-24443	Bed Plate Tube
98-24445	Bed Plate Tube
98-290330036	Ext. Pin Attach Link
98-290330184	Crawler Chain
98-290330192	Crawler Chain
98-290330193	Chain
98-290330201	15" Cl Pad 1" Pin
98-290330202	15" Rl Pad 1" Pin
98-290330259	Chain
98-290330280	Chain
98-290330358	Chain
98-290330396	Chain
98-290330402	Chain
98-290330405	Roller Link
98-290330406	Conn Link
98-290330407	Attach Link
98-290430013	Bearing
98-290430014	Bearing
98-290430015	Bearing
98-290430016	Bearing
98-290430104	Bearing
98-300020038	Shaft
98-300030034	Bushing
98-300040003	Bit Holder
98-300040005	Pick Holder
98-300040020	Bit Lug
98-300040048	Hardfaced Bit Holder
98-300050008	Bit Hard Faced
98-300110054	Key,Square
98-300110056	Key Steel Rd Ends
98-300110057	Key Steel Rd Ends
98-300110071	Key
98-300110092	Key
98-300110093	Key
98-300110148	Key
98-300110158	Key
98-300110223	Shaft
98-300110224	Shim

## PARTS LIST

### Joy Parts

Part Number	Description
98-300110225	Shim
98-300110226	Shim
98-300111047	Keysteel
98-300220021	Sprocket
98-300220036	Sprocket
98-300280061	Pin
98-300280127	Pin
98-300280408	Shear Pin (Hardened)
98-300390006	Guard
98-300390007	Guard
98-300410072	Retainer Clip
98-300410079	Clamp
98-300420030	Spacer
98-300420103	Bushing
98-300430018	Bearing
98-310151357	Jack
98-310151432	Assembly
98-310151521	Shoe Chain Assy.
98-310151546	Coupling
98-310151799	Grease Swivel Bolt
98-310151801	Grease Swivel Pipe
98-310151992	Lube Assy.
98-310220002	Sprocket
98-310630001	Bolt W/Nut & Washer
98-310760073	Head Shaft Assy.
98-310760086	Head Shaft Assy.
98-310760092	Head Shaft Assy.
98-310760164	Head Shaft Assy.
98-310760195	Head Shaft Assy.
98-310760227	Head Shaft Assy.
98-310760284	Head Shaft Assy.
98-310760331	Head Shaft Assy.
98-310760344	Head Shaft Assy.
98-310760356	Head Shaft Assy.
98-310760358	Head Shaft Assy.
98-310760369	Head Shaft Assy.
98-310760380	Head Shaft Assy.
98-310770070	Tail Shaft Assy.

## PARTS LIST

### Joy Parts

Part Number	Description
98-310770071	Tail Shaft Assy.
98-310770091	Tail Shaft Assy.
98-320010054	Key
98-320020031	Head Shaft
98-320050019	Bit W/Ret. Ring
98-320050089	Mushroom Pick
98-320050117	Bit W/Ret. Ring
98-320050118	Bit Hard Face
98-320050174	Bit H'FaceW/Ret Ring
98-320050175	Bit
98-320110170	Bearing Carrier
98-320220016	HD Sprocket
98-320220116	Shear Sprocket
98-320220117	Shear Sprocket
98-320270010	Housing
98-320320001	Chain Guard
98-320320002	Guard
98-320350045	Bearing Plate
98-320400009	Cap
98-320440002	Flight
98-320440003	Flight
98-320440005	Flight
98-320440011	Flight
98-320440042	No 1/8 W/Grouser
98-320440043	40 1/8 W/Grouser
98-320440087	40 1/8 W/Grouser
98-320440159	Flight
98-320440170	Flight
98-320440171	Flight
98-320440172	Flight
98-320600011	Star Cap
98-330260221S	Pump
98-330760077	Head Shaft Assy.
98-330760101	Head Shaft Assy.
98-330770049	Tail Shaft Assy.
98-340030042	Backing Ring
98-340220015	Sprocket
98-340220016	HD Sprocket

## PARTS LIST

### Joy Parts

Part Number	Description
98-340600006	Cap
98-344013	Head Shaft
98-344017	Shaft
98-34409	Head Shaft
98-350760090	Head Shaft Assy.
98-35772	Idler Sprocket
98-36755	Shear Hub
98-36756	Shear Hub
98-36785	Sprocket
98-36792	Sprocket
98-37082	Shear Sprocket
98-3782	Shear Sprocket
98-3811	Tail Shaft
98-38112	Tail Shaft
98-38113	56" Tail Shaft
98-390890082	Idler Shaft
98-3951	Sprocket
98-4008-2	Shear Hub
98-4060105	Gasket
98-4063125	Gasket
98-4063194	Funk Reducer Gear
98-4063195	Gear
98-4063196	Cage
98-4063197	Gear
98-4063675	Funk Planetary Shaft
98-4063685	Gasket
98-4063709	Output Shaft
98-4063795	Shim Kit
98-480560173	Paddle Valve
98-490560001	Needle Valve
98-680540010	Timer Off Delay
98-680540011	Timer on Delay
98-680540140	Motion Detector
98-680540142	Transformer
98-680540387	Switch
98-680540388	Emg. Stop Switch
98-680540389	Switch
98-6942	Shear Pin

## PARTS LIST

### Joy Parts

Part Number	Description
98-694211	Shear Pin
98-694214	Shear Pin
98-694216	Shear Pin
98-694220	Shear Pin
98-694225	Shear Pin
98-694226	Shear Pin
98-694231	Shear Pin
98-694237	Shear Pin
98-69424	Shear Pin
98-69425	Shear Pin
98-69426	Shear Pin
98-69427	Shear Pin
98-69428	Shear Pin
98-7063330	Shim Pad
98-71832	Take Up Cylinder
98-7208	Take Up
98-72136	Sprocket
98-7280116	Nozzle
98-728065	Roller Link
98-728066	Conn. Link
98-736910	Shear Bushing
98-736913	Shear Pin Bushing
98-73695	Shear Pin Bushing
98-73696	Shear Bushing
98-73697	Bushing
98-73699	Shear Bushing
98-7371	Plate Collar
98-7372	Plate
98-73722	Spacer
98-7373	Spacer
98-74672	Shoe
98-7506	Sprocket
98-7509	Pin
98-7510	Conn. Cat Pad
98-7511	Roller Cat Pad
98-7531	Spacer
98-75762	Bit
98-7643	Spocket

## PARTS LIST

### Joy Parts

Part Number	Description
98-7705	Cap
98-7706	Retainer
98-7862	Flange
98-7869	Guide
98-7870	Spacer
98-7897	Sprocket
98-790230055	Tram Motor Hyd.
98-7944	Bolt Kit
98-8021	Retainer
98-8032	Block
98-8104	Spacer
98-880110009	Retainer
98-880110010	Roll Pin
98-880110012	Sight & Temp Gauge
98-880180003	Pin
98-880280015	Pin 1"
98-880280027	Pin
A0003291-000A	Bushing
A0023335-000X	Conveyor Flight
A0031758-000A	Master Cylinder
A0031776-0000	Sprocket
A0032991-0000	Trip Gong
A0035516-000B	Cable Guide
A0040064-0000	Roller Link
A0040065-0000	Connecting Link
A0044419-0000	Valve
A0048709-0000	U-Joint
L000326C-010L	Spooling Device
L000326C-010R	Spooling Device
L000326C-012R	Spooling Device
S0000637-001A	Switch
SC-ANCHOR	Cable Anchor
SC-ANCHOR-SM	Small Cable Anchor
SC-LOOP	Cable Anchor
SC-LOOP LONG	Cable Anchor
SC-LOOP W	3" Wide Cable Anchor
X009018H-8060	Conveyor Chain
X009018H-8066	Conveyor Chain

# PARTS LIST

## Joy Components

Part Number	Description
00500108-0125	Cable Reel
00500108-0126	Cable Reel
00500108-0127	Cable Reel
00500108-0129	Cable Reel
00500108-0130	Cable Reel
00500108-0131	Cable Reel
00500108-0132	Cable Reel
00500108-0133	Cable Reel
00500108-0134	Cable Reel
00500108-0135	Cable Reel
00500108-0136	Cable Reel
00500108-0138	Cable Reel
00500108-0139	Cable Reel
00500108-0140	Cable Reel
00500108-0144	Cable Reel
00500108-0146	Cable Reel
00500108-0147	Cable Reel
00500108-0151	Cable Reel
00500108-0152	Cable Reel
00500108-0160	Cable Reel
00500108-0176	Cable Reel
00500108-0179	Cable Reel
00500108-0180	Cable Reel
00500108-0187	Cable Reel
00500108-0191	Cable Reel
00500108-0192	Cable Reel
00500108-0193	Cable Reel
00500108-0194	Cable Reel
00500108-0195	Cable Reel
00500108-0196	Cable Reel
00500108-0197	Cable Reel
00500108-0198	Cable Reel
00500108-0199	Cable Reel
00500108-0200	Cable Reel
00500108-0201	Cable Reel
00500108-0202	Cable Reel
00500108-0203	Cable Reel

## PARTS LIST

### Joy Components

Part Number	Description
00500108-0215	Cable Reel
00500108-0216	Cable Reel
00500108-0255	Cable Reel
00500108-0256	Cable Reel
00500108-0257	Cable Reel
00500108-0258	Cable Reel W/O Flanges
00500108-0260	Cable Reel
00500108-0261	Cable Reel
00500108-0262	Cable Reel
00500108-0283	Cable Reel W/O Flanges
00500108-0528	Cable Reel
00500220-0256	Wheel Unit
00500220-0284	Wheel Unit
00500220-0285	Wheel Unit
00500220-0313	Wheel Unit
00500220-0315	Wheel Unit
00500220-0316	Wheel Unit
00500220-0318	Wheel Unit
00500220-0321	Wheel Unit
00500220-0367	Wheel Unit
00500220-0387	Wheel Unit
00500509-0045	Clutch
00500554-0066	Gathering Pot
00500554-0067	Gathering Pot
00500554-0099	Gathering Pot
00500585-0106	Reducer
00500585-0125	Reducer
00500693-0052	Take Up
00500693-0058	Take Up
00506230-0032	Valve Bank
00507048-0056	Tram Reducer
00530735-0033	Planetary
00530735-0037	Planetary
00533794-0011	Reducer
00533808-0000	Bearing Carrier
00534374-0046	Tram Reducer
00534374-0047	Tram Reducer
00534384-0003	Conveyor Reducer

## PARTS LIST

### Joy Components

Part Number	Description
00534384-0004	Conveyor Reducer
00534384-0005	Conveyor Reducer
00534384-0006	Conveyor Reducer
00534384-0012	Conv. Reducer
00534384-0044	Conveyor Reducer
00534384-0045	Conveyor Reducer
00534430-0012	Take Up
00534430-0020	Take Up
00571659-0018	Clutch
00571659-0027	Clutch
00571659-0030	Clutch
00571683-0013	Wet Brake
00571683-0014	Wet Brake
00571873-0022	Spooling Device
00571873-0023	Spooling Device
00571873-0024	Spooling Device
00571873-0025	Spooling Device
00572019-0044	Gathering Pot
00572019-0045	Gathering Pot
00572019-0092	Gathering Pot
00572019-0121	Gathering Pot
03069145-2005	Metric Bearing Carrier

### Bucyrus Components

A1000X8	Reducer
A9011-100	Drop In
D2400-69	Planetary
D5400-14	Drop In

\*All component prices are on an exchange basis. Straight out purchases can be quoted upon request.

## WAGNER PARTS

004636	ELBOW
004640	ELBOW
004656	ELBOW
005106	LINK
006111	UNIVERSAL JOINT ASSY.
006142	WEAR RING
006796	BUSHING
006831	BRONZE BUSHING
006832	BRONZE BUSHING
009248	ELBOW
029002	BRONZE BUSHING
072214	HOSE
1383069	O-RING KIT
162-8873	PROBE HOLDER
1700566	O-RING KIT
1700567	PUMP REPAIR KIT
1727766	WATER PUMP
1757546	FILTER CUTTER
1A0458	CAPSCREW
1A2206	HEX BOLT
1N8173	SPIDER A
1U5718	VACUUM PUMP
2084836	O-RING KIT
2H3751	HEX BOLT
2S8959	CHAMBER GASKET
2V0936	WASHER
305031	CAPSCREW
305145	GREASE FITTING
305149	NOZZLE
306050	CAPSCREW
307019	HEX BOLT
307392	NUT
307551	NUT
307725	CAPSCREW
307760	NUT
308490	CAPSCREW
309914	CAPSCREW
328168	CHECK VALVE
328533	CAP
330853	BREATHER
332754	O RING
333315	CYLINDER PISTON
334109	SHUTDOWN VALVE
335300	REGULATOR
335471	SHUTDOWN VALVE

## WAGNER PARTS

336324	GASKET
336433	SHUTDOWN VALVE
336438	BALL VALVE
336841	KNOB
340014	O RING
340120	O-RING
340134	O-RING
340139	O-RING
340154	O-RING
340395	SHUTDOWN VALVE
340727	HOSE
342300	GASKET
342727	PHOTO TACK
342738	GUAGE
342858	HOSE
343192	THERMOSTAT
343480	SHUTDOWN VALVE
343620	SHUTDOWN VALVE
343741	SHUTDOWN VALVE
343760	SHUTDOWN VALVE
343765	SHUTDOWN VALVE
344904	BUSHING
345551	LENS
345898	PNEUMATIC HORN
348583	RELIEF VALVE
349214	WATER TEMP GUAGE
350029	TEMP SENDER
350119	WATER TEMP GUAGE
350727	HOSE
350777	SHUTDOWN VALVE
351698	HOSE
352776	VACUUM RELIEF UNIT
353378	O RING
353977	AIR STARTER
354515	RELIEF VALVE
354556	GASKET AND SEAL
355424	BEARING
356337	ELBOW
357210	CROSS HOSE
358859	SHUTDOWN VALVE
359883	CAP
361214	PUMP
361621	ORIFICE
361624	SHUTDOWN VALVE
361698	HOSE

## WAGNER PARTS

361931	LOCKSCREW
362188	RELAY VALVE
364350	WATER TEMP GUAGE
365493	O-RING KIT
366416	FILTER SEPERATOR
367893	TOOL KIT FOR IND
368239	MOUNT
368693	FIBRO-MOUNT BUSHING
369825	GASKET AND SEAL KIT
370013	BRACKET
370095	ACTIVATION
370104	VALVE
370404	AIR DRYER
370622	PUMP
371049	DRIVE BELL
371335	GUAGE ACCUMULATOR
371527	SHUTDOWN VALVE
371528	THROTTLE CYLINDER
371996	SEAL
372087	SEAL
372755	PRESSURE VALVE
373211	RELIEF VALVE
374288	SHUTDOWN VALVE
374560	SEAL KIT
375230	TEST BLOCK
375340	RELAY VALVE
375677	SHUTDOWN VALVE
376721	AIR PRESSURE GUAGE
376722	WATER TEMP VALVE
376723	OIL PRESSURE GUAGE
377011	SEAL KIT
377790	SHUTDOWN VALVE
377793	PRESSURE VALVE
377888	SHUTDOWN VALVE
378748	O RING
378751	O RING
378793	PINION SEAL
3P2044	COOLANT ADDITIVE
400253	BRAKE VALVE
402498	CHECK VALVE
405894	BREATHER
406125	WATER LEVEL VALVE
406168	CHECK VALVE
406710	TEMP VALVE
407606	SHAFT

## WAGNER PARTS

407616	O RING KIT
408391	GASKET AND SEAL KIT
408499	BREATHER TOOL KIT
408590	SEAL KIT
408953	RADIATOR CAP
409044	50 W LAMP
411112	GASKET SEAL KIT
411326	GASKET SEAL KIT
411327	GASKET SEAL KIT
412407	BUSHING
412639	BUSHING
412640	BUSHING
412706	DRIVE SHAFT KIT
412707	ALTERNATOR
413418	SWITCH BOX
414661	GASKET AND SEAL KIT
414667	ALTERNATOR
414668	SWITCH BOX
414682	SHUTDOWN VALVE
414927	BALL BEARING
415482	SHUTDOWN VALVE
415483	SHUTDOWN VALVE
415925	SHUTDOWN VALVE
416123	WATER TEMP GUAGE
416479	SHUTDOWN VALVE
416719	PHOTO TACK
417432	CHARGE HARNESS
417471	VALVE
418311	PLUG
419751	FEMALE DISCONNECT
490667	WATER TEMP GUAGE
4C4065	WRENCH
4C4782	O-RING KIT
4C6792	VCI OIL
4N9941-46	LINE
524917	AIR SERVICE GUAGE
525736	PIN
542459	GASKET
545731	GASKET
547628	PIN
5500627400	ROD
5500627800	ROD
551334	AIR INTAKE GASKET
5530501500	CAPSCREW
5532877900	VACUUM VALVE

## WAGNER PARTS

5533009300	BALL
5533029300	WASHER
5533273600	O-RING
5533296300	STUD
5533300900	SEAL
553332700	DRIVE SLEEVE
5533327800	FLANGE
5533358300	GASKET
5533371600	PUMP DRIVE SLEEVE
5533373800	WASHER
5533377500	NUT
5533384600	SNAP RING
5533494100	O-RING
5533770800	LATCH
5533910000	O-RING
5533966300	SCREEN
5533967500	TRANSMISSION FLANGE
5534133400	SPRING
5534143400	NUT
5534648400	SEAT CUSHION
5534648500	SEAT BACK CUSHION
5535068600	CONTROL VALVE
553510100	SHAFT
5535116800	FILTER
5535280000	FUEL/WATER SEPERATOR
5535344400	ROD END
5535455700	FILTER ASSY
5535510100	SHAFT
5535583200	OIL SEAL
5536216200	SPRING
5537193100	SEAL KIT
5537262100	VALVE
5537423300	SEAL KIT
5537423400	SEAL KIT
5537428800	VALVE
5537507800	SEAL KIT
5537545500	BREATHER
5537706600	DOOR LATCH
5537706700	BOLT
5537809300	RELIEF VALVE
5537812200	SEAL KIT
5537812300	SEAL KIT
5537812400	SEAL KIT
5537812500	SEAL KIT
5537813700	PIN

## WAGNER PARTS

5537859900	FUEL LEVEL INDICATOR
5537874000	SPRING WASHER
5537874900	BOLT
5537877200	BOLT
5537877300	BOLT
5537877600	FLANGE
5537879200	DUST COVER
5537879400	CASTLE NUT
5537879500	WASHER
5537880900	CLIP-CERCULAR
5537881700	DRIVE GEAR
5537881900	DOWEL PIN
5537882100	DIFFERENTIAL ASSY
5537884100	ROLLER BEARING
5537884400	O-RING
5537886300	O-RING
5537886700	FLANGE CONNECT SEAT
5537895500	OIL LEVEL METER
5540063900	BOLT
5540065800	DOWEL PIN
5540088500	SNAP RING
5540399300	HANDLE
5540399500	HANDLE
5540463300	ACCUMULATOR
5540608800	CHARGE VALVE
5540643700	COOLANT BOTTLE
5540681700	PLUG KIT
5540682000	LOCK PLATE
5540682300	BOLT
5540682400	NUT
5540694300	PIN
5540694400	PIN
5540694500	CYLINDER
5540694600	SEAL KIT
5540695200	CYLINDER END COVER
5540752200	MAGNETIC PLUG
5540836700	WASHER
5540894600	FILTER ASSY
5540894900	FILTER ASSY
5540953500	COVER
5540953700	SPINDLE NUT
5541227100	RING GEAR KIT
5541239800	CAPSCREW
5541443700	STEM ASSY
5541532600	ROLL PIN

## WAGNER PARTS

5541534100	ROLLER BEARING
5541589300	WASHER
5541613600	SCREW
5541667600	PISTON & SEAL
5541709600	SEAL KIT
5541713200	SEAL KIT
5541750200	PISTON SEAL KIT
5541754100	DIFFERENTIAL KIT
5541985600	FIRE EXTINGUISHER
5542092600	ALTERNATOR
554891	MODIFIED FITTING
5559923000	WASHER
5561056200	GASKET
5561824800	GASKET
5562059100	BUCKET PIN
5562617000	MODIFIED CHECK VALVE
5564213400	INSERT
5564679100	INSERT
5570818100H	HOSE KIT
5570934400H	HOSE KIT
5571078200	INSERT
5571120900	COVER
5572184600	SEAL
5572387200	VALVE BRACKET
5572606600	CYLINDER ASSY
5572960200	FRONT AXLE ASSY
5573346000H	HOSE KIT
5573686500	SHIM SET
5573808100	BLOCK
5573848200H	HOSE KIT
5573848300H	HOSE KIT
5573981400H	HOSE KIT
5573986600H	HOSE KIT
5573988700H	HOSE KIT
5574056600H	HOSE KIT
5574454800	VALVE
5574463100	GASKET
5574522000H	HOSE KIT
5574544000	ZINC ROD
5574545400	PLATE
5574545800	RUBBER EXTURSION
5574625300	CYLINDER ASSY
5574625400	CYLINDER ASSY
5574819600HL	HOSE KIT
5575113700	TORQUE CONVERTER

## WAGNER PARTS

5575178400H	HOSE KIT
5575241200	TRANSMISSION BOX
563674	GASKET
573533	BRACKET
581121	TANK SURGE
583594	HOSE
596993	TRANSMISSION SYSTEM
587214	PIN
587216	GASKET
587358	PIN
587470	PIN
599234	WASHER
599237	WASHER
5H7225	RETAINER NUT
5P8768	O-RING KIT
606989	CAPSCREW
609590	PIN
610538	FLAME ARRESTOR
616419	BRACKET
617611	FLOAT
618060	LEVEL SENSOR
620221	BUSHING
622221	RUBBER STRIP
623334	TUBE
623431	GASKET
625867	COVER FAN
628036	EXHAUST MANIFOLD ASY
630206	TRANSMISSION SYSTEM
640479	PIN
640516	PIN
646792	BUSHING
650479	PIN
651230	PIN
655668	PUMP
655673	MOD VALVE
6V1752	O-RING KIT
6V2972	O-RING KIT
6V4725	O-RING KIT
6V4785	O-RING KIT
6V9916	O-RING KIT
702439	MOD CABLE
705838	PILOT VALVE
716769	WEAR RING
717644	WHEEL ASSY.
723680	SCOOP PARTS

## WAGNER PARTS

726137	ADAPTER
729790	PULLEY FAN 4 GROOVE
736075	TRANSMISSION SYSTEM
740376	BRACKET
740377	BRACKET
740482	PIN
740917	CYLINDER
740941	KNOB
741923	SCRUBBER ASSY
745439	ZINC ANODE ASSY
749714	EXHAUST TUBE
7562FF10265-01	SEAL KIT
7E6807	AIR COMPRESSOR
7N6061	PLATE
7S3206	O-RING KIT
7S7809	TANK CAP
7X3378	OIL SAMPLING VALVE
801891	PIN
8B0477	HEXBOLT
8C3445	DUST CAP
8C3446	OIL SAMPLING VALVE
8C8456	SEALED CAP
8N8796	FUEL VALVE
8S2389	BODY FUEL VALVE
8T8018	RADIATOR REPAIR KIT
8T9208	PURGING PROBE
9S8679	CHAMBER ASSY
CAT3306	ENGINE ARRANGEMENT
CF-66D	AIR HORN
D25	HYDRAULIC HOSE
D32 1.5M	HYDRAULIC HOSE
D8 193	HIGH PRESSURE HOSE
FD90-1021-02-04	COUPLER-FEMALE
FD90-1045-02-04	MALE DISCONNECT
SEBR0539	CAT SERVICE MANUAL